



# ESPRIT 738 EXPRESS<sup>+</sup>

## PROGRAMMING GUIDE



SOFTWARE VERSION 3.10

### KEYPAD TROUBLE DISPLAY

Key "ON" =

- |                            |                                   |
|----------------------------|-----------------------------------|
| [1] No battery/low voltage | [7] Communicator report failure   |
| [2] Power failure          | [8] Timer loss*                   |
| [4] Bell disconnect        | [9] Tamper or zone wiring failure |
| [5] Maximum bell current   | [10] Telephone line failure       |
| [6] Max auxiliary current  | [11] Fire loop trouble            |

\*To clear timer loss trouble, see Key Access Programming [MEM]. Press [CLEAR] to clear troubles.

FIGURE 1


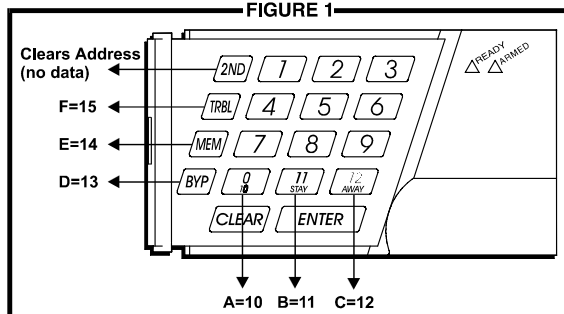



FIGURE 2

### HEXA DIGIT DATA DISPLAY FOR LED KEYPADS

Note: LCD keypads will display current data on the screen.

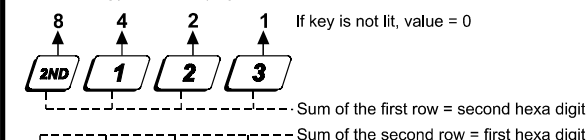

Each key in the first 2 rows of the keypad represents a specific value when the key is lit, as shown above. If the key isn't lit, the key represents 0. The sum of the values of the lit keys in the first row correspond to the second hexa digit. The sum of the values of the lit keys in the second row correspond to the first hexa digit as shown in the example below.

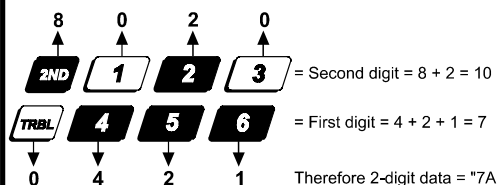

## HEXA PROGRAMMING:

Addresses 000 to 043 and 300 to 527 are programmed using the Hexa Programming method. In this mode, you can enter any hexa-digit from 0-F where keys [1] to [9] represent digits 1 to 9 respectively; the other keys represent hexa digits A to F as shown in figure 1. To program using the Hexa Programming method:

- 1) Press [ENTER] + *Installer Code* (default: **737373**)
- 2) The [ENTER] key will flash indicating you are in programming mode
- 3) Enter the desired 3-digit address
- 4) The keypad will display the 2-digit data currently saved at this address as described in figure 2
- 5) Enter 2-digit data; after entering data you do not need to press [ENTER], the software will automatically save the data into the selected address
- 6) Return to **step 2** or press [CLEAR] to exit programming mode

## STREAMLINED SECTION PROGRAMMING

This is an alternate method to Hexa Programming. The addresses (000-043 and 300-527) programmed in the Hexa Programming method are grouped into 67 sections where each section contains four addresses (i.e. section 00 = addresses 000-003). Using this method allows you to program 8 digits (4 addresses) without having to exit and re-enter addresses. Note, the keypad will not display the current data in the Hexa Streamlined Programming method. To program using the Hexa Streamlined Section method:

- 1) Press [ENTER] + *Installer code* (default: **737373**) + [7]
- 2) The [ENTER] and [2ND] keys will flash to indicate you are in programming mode
- 3) Enter **2-digit section** (00-67)
- 4) The [ENTER] key will remain on while the [2ND] key will be off
- 5) Enter **8-digit data** to program the section
- 6) The keypad will "beep" to indicate that the section has been programmed, data is saved and the software has advanced to the next section
- 7) Return to **step 4** or press [CLEAR] to exit programming mode

## INSTALLER CODE (Default **737373**)

Full access to programming, except user access codes. No access to arming/disarming. Use only numeric keys from [1] to [10]. (key [10] = 0)

## PANEL ANSWER OPTIONS

First digit disables "Answering Machine Override" (key [2ND] or key [1]), or determines period of time between first and second call (see table below). Second digit determines number of rings required before panel will answer. If [2ND][2ND] is entered, panel will not answer. (Default value is [2ND] [8].)

Streamline section	Data	Description	Address	ANSWERING MACHINE OVERRIDE
00	___/___	Installer code (1st, 2nd digit)	000	<div> <div>[2ND] or [1] = disabled</div> <div>[2] = 16 seconds</div> <div>[3] = 24 seconds</div> <div>[4] = 32 seconds</div> <div>[5] = 40 seconds</div> <div>[6] = 48 seconds</div> <div>[7] = 56 seconds</div> <div>[8] to [F] = 60 seconds</div> </div>
	___/___	Installer code (3rd, 4th digit)	001	
	___/___	Installer code (5th, 6th digit)	002	
	___/___	Panel answer options	003	
	Number of rings (Max. 15)			

Streamline section	Data	Description	Address
01	___/___	Panel identifier (1st, 2nd digit)	004
	___/___	Panel identifier (3rd, 4th digit)	005
	___/___	PC password (1st, 2nd digit)	006
	___/___	PC password (3rd, 4th digit)	007

Identifies the control panel to the PC.

Identifies the PC to the panel.

## TELEPHONE AND ACCOUNT NUMBERS

If only one central station phone number is used, program the same number for telephone number 1 and 2. **If only one account number is required, the same number must be entered for both account "A" and "B".** (No Default)

[10] = the number "0"	[BYP] = switch from pulse to tone while dialing
[11] = *	[MEM] = pause 4 seconds
[12] = #	[TRBL] = end of number

## COMPUTER TELEPHONE NUMBER (View at addresses 008 to 015.)

Streamline section	Streamline section
02 ___/___/___/___/___/___/___/___	03 ___/___/___/___/___/___/___/___
1 2 3 4 5 6 7 8	9 10 11 12 13 14 15 16

Press [TRBL] to end phone number if less than 16 digits are programmed.

## CENTRAL STATION TELEPHONE NUMBER 1 (View at addresses 016 to 023.)

Streamline section	Streamline section
04 ___/___/___/___/___/___/___/___	05 ___/___/___/___/___/___/___/___
1 2 3 4 5 6 7 8	9 10 11 12 13 14 15 16

Press [TRBL] to end phone number if less than 16 digits are programmed.

## CENTRAL STATION TELEPHONE NUMBER 2 (View at addresses 024 to 031.)

Streamline section	Streamline section
06 ___/___/___/___/___/___/___/___	07 ___/___/___/___/___/___/___/___
1 2 3 4 5 6 7 8	9 10 11 12 13 14 15 16

Press [TRBL] to end phone number if less than 16 digits are programmed.

## ACCOUNT "A" AND "B": (View at addresses 032 to 035.)

Streamline section	
08 ___/___/___/___	___/___/___/___
1 2 3 4	5 6 7 8
A	B

For 3 digit account numbers, enter "skip" ([2ND]) as first digit.

Streamline section	Data	Description	Address
09	[2ND]/[2ND]	Future use	036
	[2ND]/	1st digit: value must be entered i.e. [2ND]	037
	/	2nd digit: time correction (See table)	038
	/	1st digit: telephone 1 format	
	/	2nd digit: telephone 2 format	
10	/	1st digit: PGM1 type	039
	/	2nd digit: PGM2 type	040
	/	PGM 1	
	/	PGM2	
	/	PGM mask 1	041
	/	PGM mask 2	042
			043

#### TIME CORRECTION:

(address 037 second digit)

[2ND] - No adjustment	[8] - Minus 4 sec.
[1] - Plus 4 sec.	[9] - Minus 8 sec.
[2] - Plus 8 sec.	[10] - Minus 12 sec.
[3] - Plus 12 sec.	[11] - Minus 16 sec.
[4] - Plus 16 sec.	[12] - Minus 20 sec.
[5] - Plus 20 sec.	[BYP] - Minus 24 sec.
[6] - Plus 24 sec.	[MEM] - Minus 28 sec.
[7] - Plus 28 sec.	[TRBL] - Minus 32 sec.

### COMMUNICATOR FORMATS

#### Key

[2ND] = **ADEMCO** slow (1400Hz, 1900Hz, 10bps)  
 [1] = (1400Hz, 1800Hz, 10bps)  
 [2] = **SILENT KNIGHT** fast (1400Hz, 1900Hz, 20bps)  
 [3] = **SESCOA** (2300Hz, 1800Hz, 20bps)  
 [4] = **RADIONICS** (40bps with 1400Hz handshake)  
 [5] = **RADIONICS** (40bps with 2300Hz handshake)

[6] = **RADIONICS** with PARITY (1400Hz, 40bps)  
 [7] = **RADIONICS** with PARITY (2300Hz, 40bps)  
 [8] = **\*ADEMCO** express  
 [9] = **\*ADEMCO** contact ID (programmable codes)  
 [10] = **\*ADEMCO** contact ID (all codes)  
 [TRBL] = **\*DTMF** - no handshake (personal dialing)

\* = 4-Digit Codes Only

### PROGRAMMABLE CONTACT ID EVENT CODES

All addresses from **300** to **527** (sections **11** to **67**) programmed with values other than [2ND] [2ND] will report the contact ID codes corresponding to the values programmed. Values to be programmed should be selected from this table.

CID	REPORTING CODE	PROG. VALUE	CID	REPORTING CODE	PROG. VALUE
100:	AUXILIARY ALARM	[2ND] / [1]	300:	SYSTEM TROUBLE	[2] / [2]
110:	FIRE ALARM	[2ND] / [2]	301:	AC LOSS	[2] / [3]
111:	FIRE SMOKE	[2ND] / [3]	302:	LOW SYSTEM BATTERY	[2] / [4]
112:	COMBUSTION	[2ND] / [4]	305:	SYSTEM RESET	[2] / [5]
113:	WATER FLOW	[2ND] / [5]	306:	PROGRAM CHANGED	[2] / [6]
114:	HEAT	[2ND] / [6]	309:	BATTERY TEST FAIL	[2] / [7]
115:	PULLSTATION	[2ND] / [7]	320:	SOUNDER/RELAY TROUBLE	[2] / [8]
116:	DUCT	[2ND] / [8]	321:	BELL 1 TROUBLE	[2] / [9]
117:	FLAME	[2ND] / [9]	323:	ALARM RELAY TROUBLE	[2] / [10]
118:	NEAR ALARM	[2ND] / [10]	350:	COMMUNICATION TROUBLE	[2] / [11]
120:	PANIC ALARM	[2ND] / [11]	351:	TELCO 1 FAULT	[2] / [12]
121:	DURESS	[2ND] / [12]	354:	FAIL TO COMMUNICATE	[2] / [BYP]
122:	SILENT PANIC	[2ND] / [BYP]	370:	PROTECTION LOOP TROUBLE	[2] / [MEM]
123:	AUDIBLE PANIC	[2ND] / [MEM]	371:	PROTECTION LOOP OPEN	[2] / [TRBL]
130:	BURGLARY	[2ND] / [TRBL]	372:	PROTECTION LOOP SHORT	[3] / [2ND]
131:	PERIMETER BURG.	[1] / [2ND]	373:	FIRE LOOP TROUBLE	[3] / [1]
132:	INTERIOR BURG.	[1] / [1]	382:	SENSOR TROUBLE	[3] / [2]
133:	24HR BURGLARY	[1] / [2]	383:	SENSOR TAMPER	[3] / [3]
136:	BURGLARY OUTDOOR	[1] / [3]	400:	OPEN/CLOSE	[3] / [4]
137:	BURGLARY TAMPER	[1] / [4]	401:	OPEN/CLOSE BY USER #	[3] / [5]
138:	BURGLARY NEAR ALARM	[1] / [5]	402:	GROUP OPEN/CLOSE	[3] / [6]
140:	GENERAL ALARM	[1] / [6]	403:	AUTOMATIC OPENING/CLOSING	[3] / [7]
150:	24 HOUR AUX	[1] / [7]	404:	LATE TO OPEN/CLOSE	[3] / [8]
151:	GAS DETECTED	[1] / [8]	407:	REMOTE ARM DOWNLOAD	[3] / [9]
152:	REFRIGERATION	[1] / [9]	410:	REMOTE ACCESS	[3] / [10]
153:	LOSS OF HEAT	[1] / [10]	441:	OPEN/CLOSE - STAY MODE	[3] / [11]
154:	WATER LEAKAGE	[1] / [11]	570:	BYPASS	[3] / [12]
155:	FOIL BREAK ALARM	[1] / [12]	572:	24 HOUR ZONE BYPASS	[3] / [BYP]
156:	DAY TROUBLE ALARM	[1] / [BYP]	573:	BURGLARY BYPASS #	[3] / [MEM]
157:	LOW GAS LEVEL	[1] / [MEM]	574:	GROUP BYPASS	[3] / [TRBL]
158:	HIGH TEMPERATURE	[1] / [TRBL]	601:	MANUAL TEST	[4] / [2ND]
159:	LOW TEMPERATURE	[2] / [2ND]	602:	PERIODIC TEST	[4] / [1]
161:	LOSS AIR FLOW	[2] / [1]	625:	TIME/DATE RESET	[4] / [2]

For addresses **044** to **126**, see pages 7 to 10.

**REPORTING CODES:** All digits from [1] to [F] are valid. [2ND] = digit will not be reported except for contact I.D. programmable codes. For single digit reporting enter "skip" ([2ND]) as first digit. (Default = "empty" [2ND] [2ND])

**If CONTACT I.D. format (all codes) is selected, addresses 300 to 527 (sections 11- 67) do not have to be programmed.**  
(Select Contact I.D. (all codes) - key [10] for both central station numbers at section 09 - address 038.)

**ARMING (closing) CODES:**

Streamline section	Data	Description	Address	Streamline section	Data	Description	Address
<b>11</b>	___/___	Auto / Espload	<b>300</b>	<b>18</b>	___/___	User code 27	<b>328</b>
	___/___	Master	<b>301</b>		___/___	User code 28	<b>329</b>
	___/___	User code 1	<b>302</b>		___/___	User code 29	<b>330</b>
	___/___	User code 2	<b>303</b>		___/___	User code 30	<b>331</b>
<b>12</b>	___/___	User code 3	<b>304</b>	<b>19</b>	___/___	User code 31	<b>332</b>
	___/___	User code 4	<b>305</b>		___/___	User code 32	<b>333</b>
	___/___	User code 5	<b>306</b>		___/___	User code 33	<b>334</b>
	___/___	User code 6	<b>307</b>		___/___	User code 34	<b>335</b>
<b>13</b>	___/___	User code 7	<b>308</b>	<b>20</b>	___/___	User code 35	<b>336</b>
	___/___	User code 8	<b>309</b>		___/___	User code 36	<b>337</b>
	___/___	User code 9	<b>310</b>		___/___	User code 37	<b>338</b>
	___/___	User code 10	<b>311</b>		___/___	User code 38	<b>339</b>
<b>14</b>	___/___	User code 11	<b>312</b>	<b>21</b>	___/___	User code 39	<b>340</b>
	___/___	User code 12	<b>313</b>		___/___	User code 40	<b>341</b>
	___/___	User code 13	<b>314</b>		___/___	User code 41	<b>342</b>
	___/___	User code 14	<b>315</b>		___/___	User code 42	<b>343</b>
<b>15</b>	___/___	User code 15	<b>316</b>	<b>22</b>	___/___	User code 43	<b>344</b>
	___/___	User code 16	<b>317</b>		___/___	User code 44	<b>345</b>
	___/___	User code 17	<b>318</b>		___/___	User code 45	<b>346</b>
	___/___	User code 18	<b>319</b>		___/___	User code 46	<b>347</b>
<b>16</b>	___/___	User code 19	<b>320</b>	<b>23</b>	___/___	User code 47	<b>348</b>
	___/___	User code 20	<b>321</b>		___/___	User code 48 / (Duress)	<b>349</b>
	___/___	User code 21	<b>322</b>	- - - - - See next page			
	___/___	User code 22	<b>323</b>				
<b>17</b>	___/___	User code 23	<b>324</b>				
	___/___	User code 24	<b>325</b>				
	___/___	User code 25	<b>326</b>				
	___/___	User code 26	<b>327</b>				

## REPORTING CODES: (reset code "empty")

### DISARMING (opening) CODES:

Streamline section	Data	Description	Address	Streamline section	Data	Description	Address
	→ See previous page						
<b>23</b>	—/—	Esplod	350	<b>30</b>	—/—	User code 25	376
	—/—	Master	351		—/—	User code 26	377
<b>24</b>	—/—	User code 1	352		—/—	User code 27	378
	—/—	User code 2	353		—/—	User code 28	379
	—/—	User code 3	354	<b>31</b>	—/—	User code 29	380
	—/—	User code 4	355		—/—	User code 30	381
<b>25</b>	—/—	User code 5	356		—/—	User code 31	382
	—/—	User code 6	357		—/—	User code 32	383
	—/—	User code 7	358	<b>32</b>	—/—	User code 33	384
	—/—	User code 8	359		—/—	User code 34	385
<b>26</b>	—/—	User code 9	360		—/—	User code 35	386
	—/—	User code 10	361		—/—	User code 36	387
	—/—	User code 11	362	<b>33</b>	—/—	User code 37	388
	—/—	User code 12	363		—/—	User code 38	389
<b>27</b>	—/—	User code 13	364		—/—	User code 39	390
	—/—	User code 14	365		—/—	User code 40	391
	—/—	User code 15	366	<b>34</b>	—/—	User code 41	392
	—/—	User code 16	367		—/—	User code 42	393
<b>28</b>	—/—	User code 17	368		—/—	User code 43	394
	—/—	User code 18	369		—/—	User code 44	395
	—/—	User code 19	370	<b>35</b>	—/—	User code 45	396
	—/—	User code 20	371		—/—	User code 46	397
<b>29</b>	—/—	User code 21	372		—/—	User code 47	398
	—/—	User code 22	373		—/—	User code 48 /	399
	—/—	User code 23	374			(Duress)	
	—/—	User code 24	375				

### ALARM CODES ZONES 1 TO 9:

Streamline section	Data	Description	Address
<b>36</b>	—/—	Zone 1	400
	—/—	Zone 2	401
	—/—	Zone 3 (fire add. 100)	402
	—/—	Zone 4	403
<b>37</b>	—/—	Zone 5	404
	—/—	Zone 6	405
	—/—	Zone 7	406
	—/—	Zone 8	407
<b>38</b>	—/—	Zone 9	408
	[2ND]/[2ND]	Future Use	409
	[2ND]/[2ND]	Future Use	410
	[2ND]/[2ND]	Future Use	411

### ZONES 1 TO 9 RESTORE CODES:

Streamline section	Data	Description	Address
<b>42</b>	—/—	Zone 1	424
	—/—	Zone 2	425
	—/—	Zone 3 (fire add. 100)	426
	—/—	Zone 4	427
<b>43</b>	—/—	Zone 5	428
	—/—	Zone 6	429
	—/—	Zone 7	430
	—/—	Zone 8	431
<b>44</b>	—/—	Zone 9	432
	[2ND]/[2ND]	Future Use	433
	[2ND]/[2ND]	Future Use	434
	[2ND]/[2ND]	Future Use	435

Addresses **409-423** reserved for future use.

Addresses **433-447** reserved for future use

## REPORTING CODES: (reset code “empty”)

### ZONES 1 TO 9 SHUTDOWN CODES:

Streamline section	Data	Description	Address
<b>48</b>	—/—	Zone 1	<b>448</b>
	—/—	Zone 2	<b>449</b>
	—/—	Zone 3	<b>450</b>
	—/—	Zone 4	<b>451</b>
<b>49</b>	—/—	Zone 5	<b>452</b>
	—/—	Zone 6	<b>453</b>
	—/—	Zone 7	<b>454</b>
	—/—	Zone 8	<b>455</b>
<b>50</b>	—/—	Zone 9	<b>456</b>
	[2ND]/[2ND]	Future Use	<b>457</b>
	[2ND]/[2ND]	Future Use	<b>458</b>
	[2ND]/[2ND]	Future Use	<b>459</b>

Addresses **457-471** reserved for future use

### TAMPER 1 TO 7 TROUBLE CODES:

Streamline section	Data	Description	Address
<b>54</b>	—/—	Tamper 1	<b>472</b>
	—/—	Tamper 2	<b>473</b>
	—/—	Tamper 3	<b>474</b>
	—/—	Tamper 4	<b>475</b>
<b>55</b>	—/—	Tamper 5	<b>476</b>
	—/—	Tamper 6	<b>477</b>
	—/—	Tamper 7	<b>478</b>
	[2ND]/[2ND]	Future Use	<b>479</b>

Addresses **479-495** reserved for future use

### TROUBLE CODES:

Streamline section	Data	Description	Address
<b>60</b>	—/—	Max. auxiliary current	<b>496</b>
	—/—	Bell disconnect / max. bell current	<b>497</b>
	—/—	Battery disconnect / low voltage	<b>498</b>
	—/—	Power failure	<b>499</b>

Streamline section	Data	Description	Address
<b>61</b>	—/—	Fire loop trouble	<b>500</b>
	—/—	Timer loss	<b>501</b>
	[2ND]/[2ND]	Future Use	<b>502</b>
	[2ND]/[2ND]	Future Use	<b>503</b>

### TROUBLE RESTORE CODES:

Streamline section	Data	Description	Address
<b>62</b>	—/—	Max. auxiliary current	<b>504</b>
	—/—	Bell disconnect	<b>505</b>
	—/—	Battery disconnect / low voltage	<b>506</b>
	—/—	Power failure	<b>507</b>

Streamline section	Data	Description	Address
<b>63</b>	—/—	Fire loop trouble	<b>508</b>
	—/—	Timer programmed	<b>509</b>
	—/—	Tamper / wiring fault	<b>510</b>
	—/—	TLM trouble restore	<b>511</b>

### SPECIAL CODES:

Streamline section	Data	Description	Address
<b>64</b>	—/—	Test report	<b>512</b>
	—/—	Panic 1	<b>513</b>
	—/—	Panic 2	<b>514</b>
	—/—	Panic 3	<b>515</b>
<b>65</b>	—/—	Late to close	<b>516</b>
	—/—	No movement	<b>517</b>
	—/—	Partial arming	<b>518</b>
	—/—	Recent close	<b>519</b>

Streamline section	Data	Description	Address
<b>66</b>	—/—	Duress	<b>520</b>
	[2ND]/[2ND]	Future Use	<b>521</b>
	[2ND]/[2ND]	Future Use	<b>522</b>
	[2ND]/[2ND]	Future Use	<b>523</b>
<b>67</b>	—/—	Log-in (Espload)	<b>524</b>
	—/—	Program change	<b>525</b>
	[2ND]/[2ND]	Future Use	<b>526</b>
	[2ND]/[2ND]	Future Use	<b>527</b>

## DECIMAL PROGRAMMING

- 1) Press **[ENTER] + Installer Code (Default: 737373)**
- 2) The **[ENTER]** key will flash to indicate you are in programming mode
- 3) Enter **3-digit address** (044-061)
- 4) The keypad will now display the current 3-digit data currently saved at this address as described in figure 3
- 5) Enter **3-digit data** (000-255) value; after entering data you do not need to press **[ENTER]**, the software will automatically save the data into the selected address
- 6) Return to **step 2** or press **[CLEAR]** to exit programming mode

**044:** \_\_\_\_/\_\_\_\_/\_\_\_\_ (hours) Auto arm time (between "000" and "023")

**045:** \_\_\_\_/\_\_\_\_/\_\_\_\_ (minutes) Auto arm time (between "000" and "059")

**046:** \_\_\_\_/\_\_\_\_/\_\_\_\_ (days) Auto test report every ? days (between "001" and "255") (000 = disabled)

**047:** \_\_\_\_/\_\_\_\_/\_\_\_\_ (hours) Auto test report (between "000" and "023")

**048:** \_\_\_\_/\_\_\_\_/\_\_\_\_ (minutes) Auto test report (between "000" and "059")

**049:** \_\_\_\_/\_\_\_\_/\_\_\_\_ (seconds) Exit delay (*factory default 60 seconds*)

**050:** \_\_\_\_/\_\_\_\_/\_\_\_\_ (seconds) Entry delay 1 (*factory default 45 seconds*)

**051:** \_\_\_\_/\_\_\_\_/\_\_\_\_ (seconds) Entry delay 2 (*factory default 45 seconds*)

**052:** \_\_\_\_/\_\_\_\_/\_\_\_\_ (minutes) Bell cut-off time (*factory default 5 minutes*)

**053:** \_\_\_\_/\_\_\_\_/\_\_\_\_ ( x 15 mSec.) Zone speed (*factory default 600 mSec.*)

**054:** \_\_\_\_/\_\_\_\_/\_\_\_\_ (minutes) Power failure report delay (*factory default 30 minutes*) (000 = disabled)

**055:** \_\_\_\_/\_\_\_\_/\_\_\_\_ ( x 15 minutes) "No movement" report time (*factory default 8 hours*) (000 = disabled)

**056:** \_\_\_\_/\_\_\_\_/\_\_\_\_ PGM timer setting (001 to 127 for seconds and 129 to 255 for minutes) (*factory default 5 seconds*)  
Add 128 to desired value in minutes (i.e. for 5 minutes: enter 5 + 128 = 133)

**057:** \_\_\_\_/\_\_\_\_/\_\_\_\_ Intellizone delay (in seconds, minimum = 10 seconds) (*factory default 48 seconds*)

**058:** \_\_\_\_/\_\_\_\_/\_\_\_\_ Installer code lock (147 = locked, 000 = unlocked)

**059:** \_\_\_\_/\_\_\_\_/\_\_\_\_ (seconds) Programmable delay before alarm transmission (5 to 63 seconds) (000 = disabled)


**060:** \_\_\_\_/\_\_\_\_/\_\_\_\_ (seconds) Recent closing delay (000 = disabled)

**061:** \_\_\_\_/\_\_\_\_/\_\_\_\_ Future Use

FIGURE 3


### DECIMAL DISPLAY FOR LED KEYPADS

Note: LCD keypads will display current data on the screen.

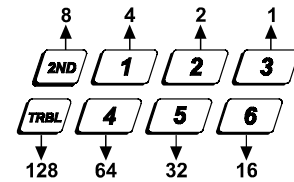

Each key in the first 2 rows of the keypad represents a specific value when the key is lit, as shown above. When the key isn't lit, the key represents 0. Add the values of the lit keys to obtain the entered data value as shown in the example below.

Example

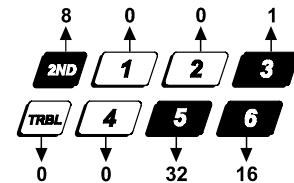

Therefore  $8 + 1 + 32 + 16 = 057$

# FEATURE SELECT PROGRAMMING

Addresses 062 to 126 are programmed using the Feature Select Programming method. In this method, every key on the keypad in each address represents an option or feature. Pressing a key will display it on the keypad and pressing it again will extinguish the key. The On/Off status of each key determines the selected feature. To program using the Feature Select Programming method:

- 1) Press **[ENTER]** + *Installer Code (Default: 737373)*
- 2) The **[ENTER]** key will flash to indicate you are in programming mode
- 3) Enter **3-digit address** (062-126)
- 4) After entering the address, the keypad will display the feature selection status. Turn the keys On/Off by pressing the appropriate key until the desired options are set. Then press the **[ENTER]** key to accept, there will be a confirmation "beep" indicating the options have been accepted. The **[ENTER]** key will flash to indicate that the software is awaiting the next address entry
- 5) Return to **step 3** to continue programming or press **[CLEAR]** to exit programming mode

CODE PRIORITY																	
KEY SELECT:		[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]	[9]	[10]	[11]	[12]	[BYP]	[MEM]	[TRBL]	[2ND]
062:	User #:	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	SYSTEM "A" / STAY	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
064:	User #:	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
	SYSTEM "A" / STAY	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
066:	User #:	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
	SYSTEM "A" / STAY	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
068:	User #:	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	SYSTEM "B" / AWAY	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
070:	User #:	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
	SYSTEM "B" / AWAY	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
072:	User #:	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
	SYSTEM "B" / AWAY	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
074:	User #:	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	Codes with bypass access	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
076:	User #:	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
	Codes with bypass access	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
078:	User #:	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48
	Codes with bypass access	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Addresses **080** to **085** for future use.



## FEATURE SELECT PROGRAMMING (continued)

(On/off status of key lights determines which feature is selected.)

### 086:

See "TLM" table -----

PS1/Keyswitch = regular arm -----

PS1/keys switch arming -----

Call back -----

Auto arm on time -----

Auto arm on no movement -----

Pulse dialing -----

Partitioning -----

Silent zone/panic generates a silent alarm

(1:2) Pulse Europe -----

See "Reporting" table -----

N/A

Bell squawk on arm/disarm -----

Auto zone shutdown -----

KEY  
OFF / ON

☐ [2ND] ☐

☐ [1] ☐

☐ [2] ☐

☐ [3] ☐

☐ [4] ☐

☐ [5] ☐

☐ [6] ☐

☐ [7] ☐

☐ [8] ☐

☐ [9] ☐

☐ [10] ☐

☐ [11] ☐

☐ [12] ☐

☐ [BYP] ☐

☐ [MEM] ☐

☐ [TRBL] ☐

stay arm / System A

enabled

enabled

enabled

enabled

Tone dialing (DTMF)

enabled

generates only a report

(1:1.5) Pulse USA

N/A

enabled

enabled

### TELEPHONE LINE MONITOR

Address 086, Key [2ND] [1]

KEY

[2ND] [1]

OFF OFF — TLM disabled

OFF ON — TLM generates trouble only

ON OFF — generates an alarm if armed

ON ON — silent alarm becomes audible

(address 086, key [9] has to be OFF)

### REPORTING OPTIONS

Address 086, Key [11] [12]

KEY TYPE  
[11] [12]

DIALING SEQUENCE (tel. No.)

OFF OFF — Reporting disabled

OFF ON — Regular reporting — 1,2,1,2,1,2,1,2, fail to comm.

ON OFF — Split reporting: Alarms\* — 1,1,1,1,1,1,1,1, fail to comm.

System report — 2,2,2,2,2,2,2,2, fail to comm.

ON ON — Double reporting — 1,1,1,1,1,1,1,1, fail to comm.,  
2,2,2,2,2,2,2,2, fail to comm.

\*On alarm, all reports are made to Tel. #1 until system is disarmed.  
(Once disarmed, system reports are made to Tel. #2)

### 088:

Automatic event buffer transmission -----

Panic 1 (keys [1] & [3], PS1) -----

Panic 2 (keys [4] & [6]) -----

Panic 3 (keys [7] & [9]) -----

Panic 1 silent (PS1) -----

Panic 2 silent -----

Panic 3 silent -----

Key [10] regular arm -----

Key [11] stay or system A arm -----

6 digit access codes -----

Tamper Recognition -----

Beep on exit delay -----

Report zone restore on bell cut-off -----

Zones with EOL (1K $\Omega$ ) -----

Always report disarm -----

KEY  
OFF / ON

☐ [2ND] ☐

☐ [1] ☐

☐ [2] ☐

☐ [3] ☐

☐ [4] ☐

☐ [5] ☐

☐ [6] ☐

☐ [7] ☐

☐ [8] ☐

☐ [9] ☐

☐ [10] ☐

☐ [11] ☐

☐ [12] ☐

☐ [BYP] ☐

☐ [MEM] ☐

☐ [TRBL] ☐

enabled

enabled

enabled

enabled

audible

audible

fire

enabled

enabled

4 digit

enabled

on zone closure

no EOL

only after alarm

### TAMPER / WIRE FAULT DEFINITIONS

Address 088, Key [10] [11]

SYSTEM ARMED

KEY

[10] [11]

SYSTEM DISARMED\*

Alarm as per individual  
zone definitions

OFF OFF

— Tamper supervision  
disabled

Always generate trouble  
and alarm, audible or  
silent as per individual  
zone definitions

OFF ON

— No alarm, trouble code  
reported

ON OFF

— Silent alarm. Trouble and  
alarm codes reported

ON ON

— Audible alarm. Trouble and  
alarm codes reported\*\*

\* Exception: for 24 hour zones the tamper definition will follow the  
audible/silent alarm definition of the 24 hour zone.

\*\* Silent zones will generate a silent alarm.

### 090:

Exclude power failure from trouble display -----

N/A

Auto arm = regular arm -----

N/A

N/A

N/A

N/A

No tamper bypass -----

N/A

N/A

Audible trouble warning -----

Duress -----

Keypad 1 zone supervision -----

Keypad 2 zone supervision -----

N/A

N/A

N/A

KEY  
OFF / ON

☐ [2ND] ☐

☐ [1] ☐

☐ [2] ☐

☐ [3] ☐

☐ [4] ☐

☐ [5] ☐

☐ [6] ☐

☐ [7] ☐

☐ [8] ☐

☐ [9] ☐

☐ [10] ☐

☐ [11] ☐

☐ [12] ☐

☐ [BYP] ☐

☐ [MEM] ☐

☐ [TRBL] ☐

enabled

N/A

stay / System A

N/A

N/A

N/A

N/A

tamper follows zone bypass definition

N/A

N/A

enabled

enabled

enabled



enabled

N/A

N/A

N/A

N/A

ZONE DEFINITION: (reset = "OFF")									
KEY SELECT:	[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]	[9]
Intellizone = ON <b>092</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Silent = ON <b>096</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
24HR./Fire = ON <b>100</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
 Keypad Zones cannot be set as 24hr. Zones  When zone 3 is defined "24 Hour" it becomes a fire zone									
Instant = ON <b>104</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Follow = ON <b>108</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Delay 2 = ON <b>112</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
System A / STAY									
If ON, zone is armed on stay or "system A" arming <b>116</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
System B									
If ON, zone is armed in "system B" arming <b>120</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Bypass enable = ON <b>124</b>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Zones that are not selected at addresses **100** to **112** become "Delay 1" zones.

**Note:** Do not use the Intellizone feature and an entry delay for the same zone, otherwise an alarm may occur as a user tries to disarm the system.

## KEY ACCESS PROGRAMMING

Programs features quickly, without entering addresses or section numbers.

To activate "key access programming", press **[ENTER]**, followed by installer, master or user code 1. (Code required depends on the feature you wish to access - see below.) Press the key corresponding to the desired feature.

Press **[ENTER]** or **[CLEAR]** to exit.

### key

#### **[8]** Installer test mode *(installer code only)*

In installer test mode, a confirmation beep (intermittent) indicates test is "on", a "rejection" beep (long) indicates test is "off". The bell will squawk during walk testing to indicate opened, functional zones.

#### **[9]** "Auto arming" time program *(all 3 codes)*

Key **[9]** flashes. Enter two digits (00 to 23) for hours + 2 digits (00 to 59) for minutes.

#### **[MEM]** "Panel time" and clear "trouble 8" *(all 3 codes)*

Key **[MEM]** flashes. Enter two digits (00 to 23) for hours + 2 digits (00 to 59) for minutes.

#### **[BYP]** Test report *(all 3 codes)*

Reporting is enabled at address **086**, keys **[11]**, **[12]**. A value must be entered at address **512**, and both telephone and account numbers must be programmed.

#### **[TRBL]** Call Espload via telephone *(all 3 codes)*

Panel identifier and PC password (addresses **004-007**) and computer telephone number (addresses **008-015**) must be programmed.

#### **[AWAY]** Answer Espload *(all 3 codes)*

This feature is available when using the ADP-1 adapter. In Espload, "blind dial" must be activated in "modem setup" section, and panel phone number programmed (works also without ADP-1).

#### **[STAY]** Cancel communication attempts *(master code and user 1 can only stop calls to Espload)*

Until next reportable event *(installer code - all communications)*


When communicating with Espload, it is impossible to enter programming mode.

# CONNECTION DIAGRAMS


The system hardware will recognize the following zone conditions:

## SINGLE ZONE CONNECTIONS


### N.C. Contacts, Without EOL Resistor

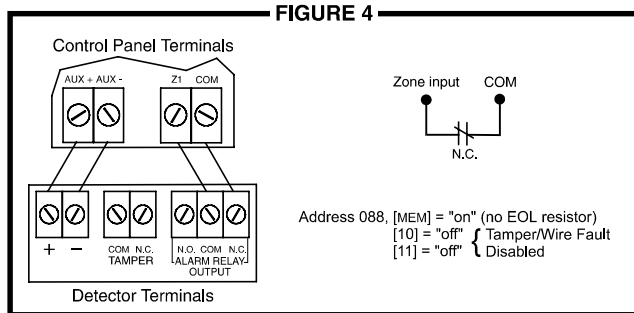


### N.C. Contacts, With EOL Resistor (UL/ULC)

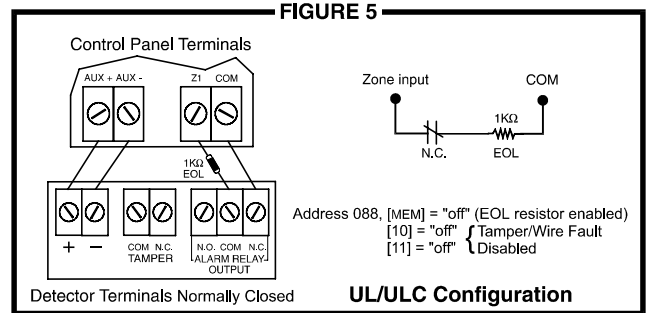


### N.O. Contacts, With EOL Resistor (UL/ULC)

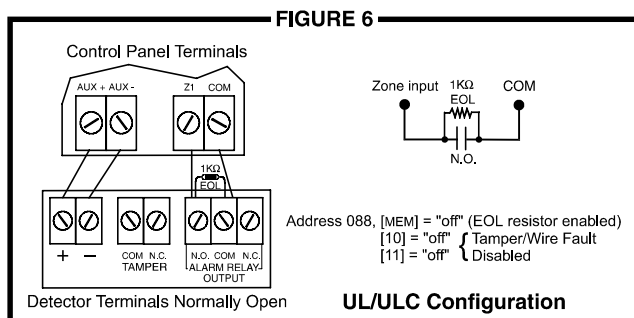

### N.C. Contacts, Without EOL Resistor, With Tamper Recognition

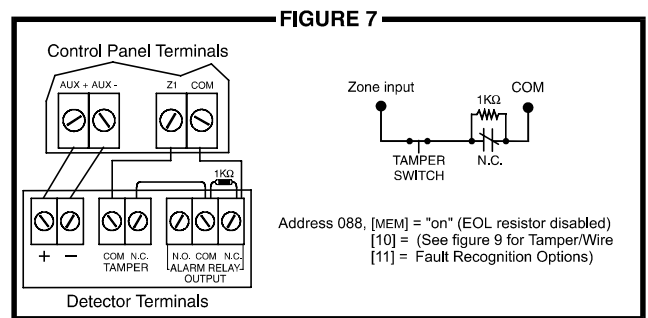

### N.C. Contacts, With EOL Resistor, With Tamper and Wire Fault Recognition (UL/ULC)

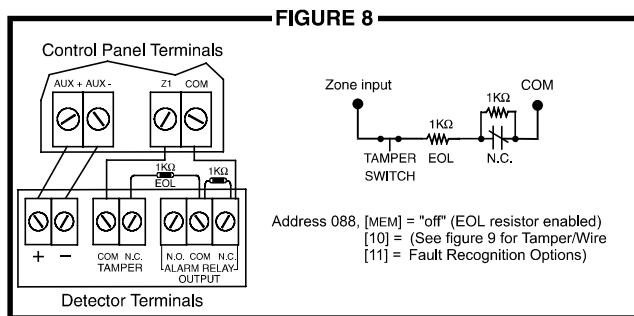

**FIGURE 9**

**TAMPER / WIRE FAULT DEFINITIONS**  
Address 088, Key [10] [11]

	KEY		
	[10]	[11]	
<b>SYSTEM ARMED</b>			<b>SYSTEM DISARMED*</b>
Alarm as per individual zone definitions	- OFF	OFF	- Tamper supervision disabled
Always generate trouble and alarm, audible or silent as per individual zone definitions	OFF	ON	- No alarm, trouble code reported
	ON	OFF	- Silent alarm. Trouble and alarm codes reported
	ON	ON	- Audible alarm, Trouble and alarm codes reported**

\* Exception: for 24 hour zones the tamper definition will follow the audible/silent alarm definition of the 24 hour zone.


\*\* Silent zones will generate a silent alarm.

# KEYPAD ZONE CONNECTION DIAGRAMS

Note: Keypad zones always use (1K OHM) EOL resistor.


**FIGURE 10**

## ONE KEYPAD / ONE ZONE

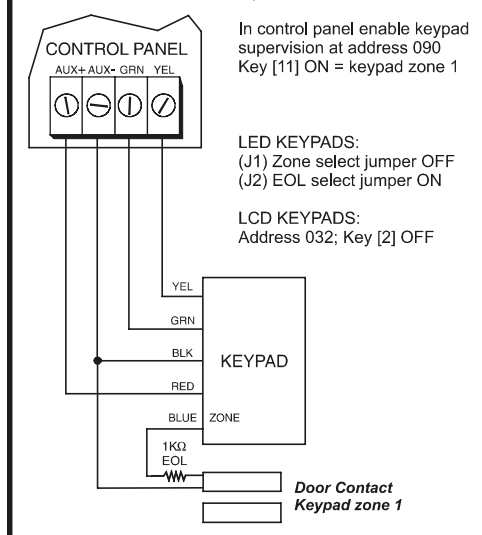


**FIGURE 11**

## TWO KEYPADS / TWO ZONES

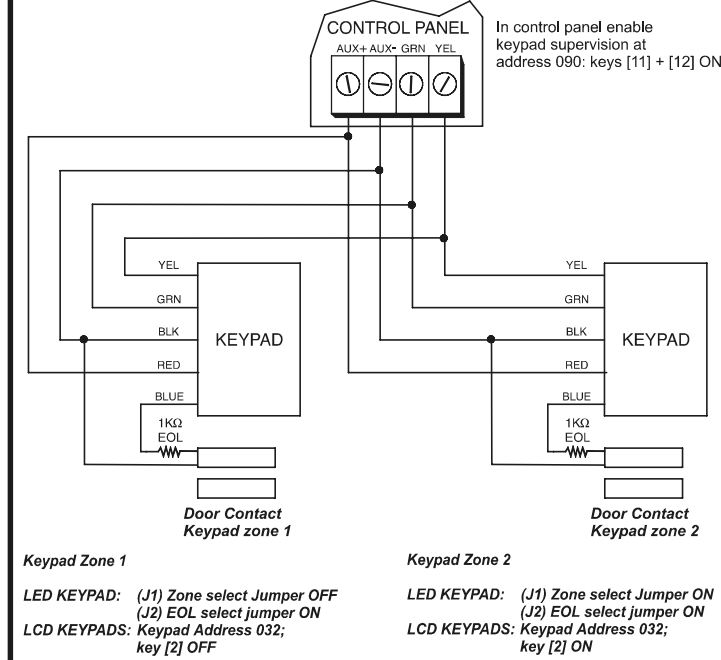

**FIGURE 12**


## 639 LCD KEYPAD ONE KEYPAD (W/ATZ) / TWO ZONES

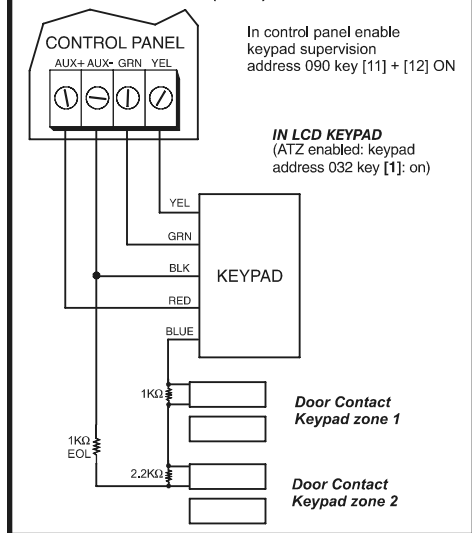

## KEYPAD TAMPER SWITCH

NOTE: To connect the keypad's tamper switch, simply connect the keypad as shown below. If the cover is removed when the system is armed, the keypad will send a zone open and the control panel will generate an alarm.


To corresponding terminals on the control panel.

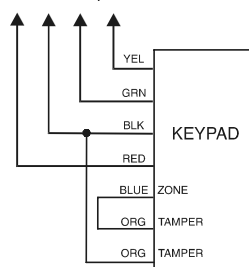

Please note that in all cases, keypad zone supervision must be enabled in the control panel and keypad jumpers J1 and J2 must be set accordingly.

Connecting keypad tamper when no detection device is used.

To corresponding terminals on the control panel.

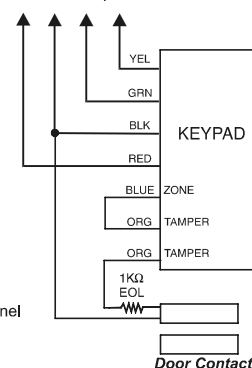


Connecting keypad tamper when using keypad zone.

# ESPRIT 738 EXPRESS WIRING DIAGRAM

Charging and battery test LED  
(every 60 seconds)


For use with 708, Esprint, and SRI-18 PGM expander.

"TLM" LED: Short flash = OK  
Long flash = Fault  
OFF = Disabled  
Constant = On Line

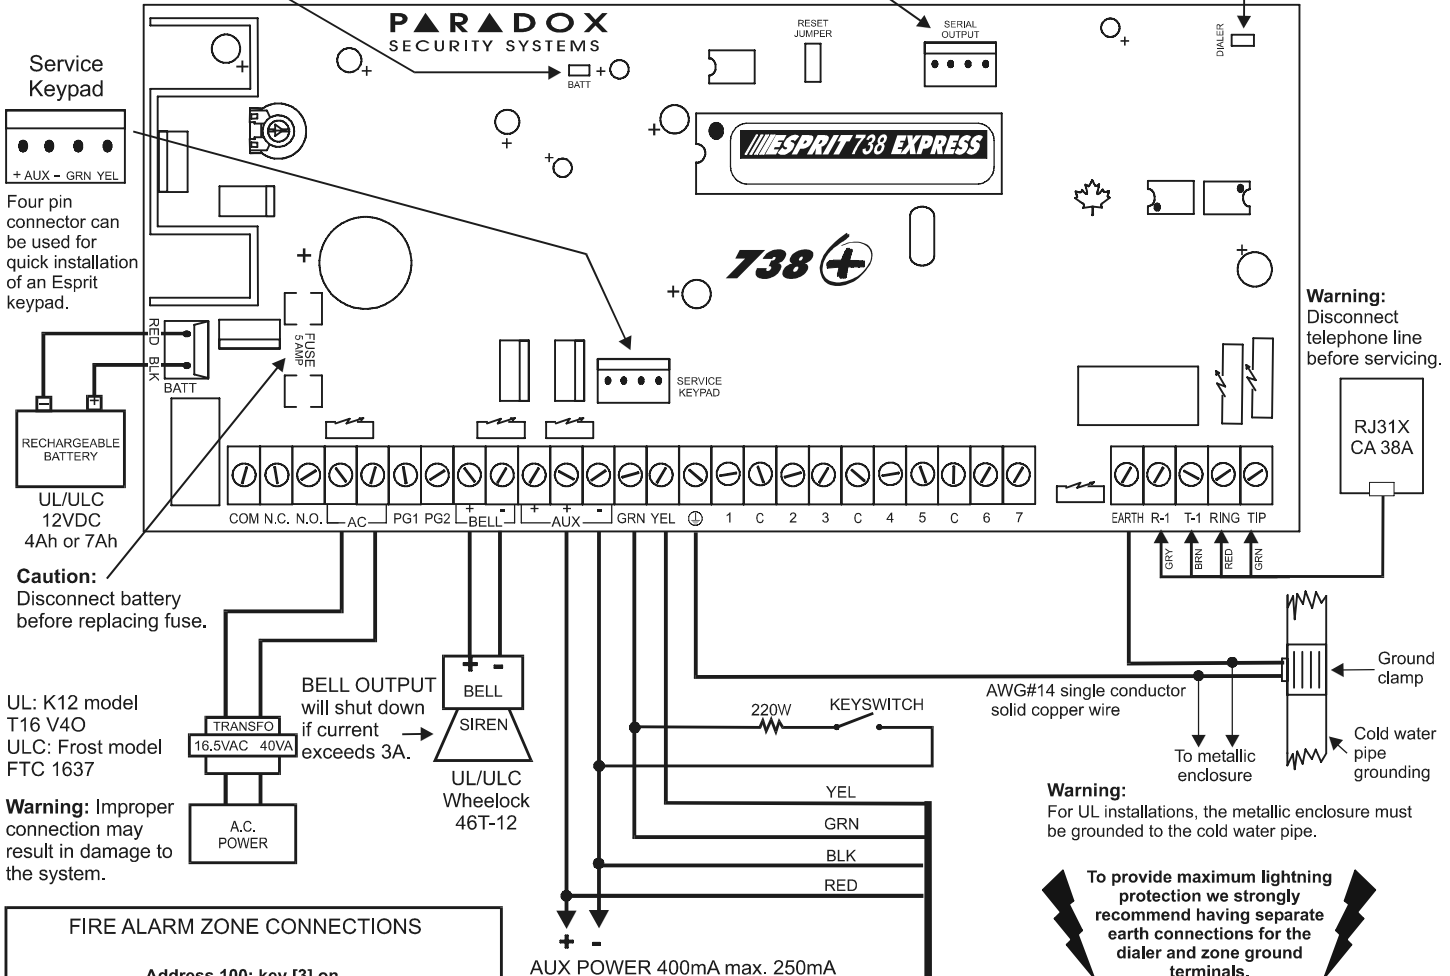

## FIRE ALARM ZONE CONNECTIONS


Address 100; key [3] on.  
To set zone 3 as a fire zone.

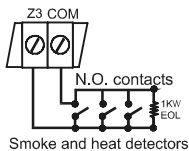

## FIRE RESET

To program PGM to conduct a 4 second smoke detector reset when [CLEAR] and [ENTER] are pressed simultaneously:

Address 039 = [bvr] (first digit) Address 042 = [2nd] [6]  
Address 040 = [5] [0] Address 056 = [0] [0] [4]



Smoke detector power supervision relay, 12VDC

Smoke detector must be 4 wire latching - UL Falcon model 5454, ULC BRK 2412.  
Power supervision relay model MR3-UL.

AUX POWER 400mA max. 250mA max. for 24 hr. standby. To connect additional wiring to auxiliary power, use the red (+) and black (-) keypad connectors. Aux power will shut down if current exceeds 1A.


All outputs are Class 2 or power-limited, except for the battery terminal. The Class 2 or power-limited fire alarm circuits shall be installed using CL3, CL3R, CL3P, or substitute cable permitted by the National Electrical Code, ANSI/NFPA 70.

## KEYPADS


- LED Keypads 616, 636 & 646
- LCD Keypads 639

The maximum number of keypads per installation is dependent on the auxiliary output, which is not to exceed 400mA. Please refer to the current consumption table in section 2.3.3 of the instruction manual. For information on connecting keypad zones, refer to page 13 of the programming guide.

## GROUND START CIRCUIT

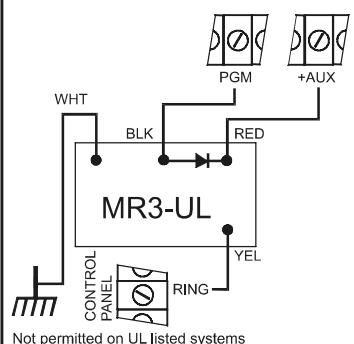

## PGM OUTPUT RELAY

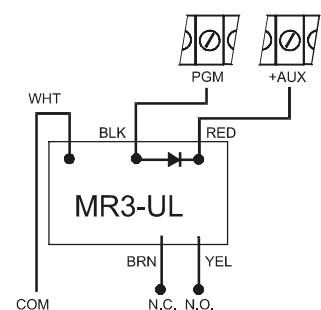

**PARADOX**  
SECURITY SYSTEMS

780 Boul. Industriel, St-Eustache, Montreal, Quebec, Canada J7R 5V3 Fax: (450) 491-2313 <http://www.paradox.ca>

PRINTED IN CANADA - 01/2002